



## Disassembly Instructions RM2J

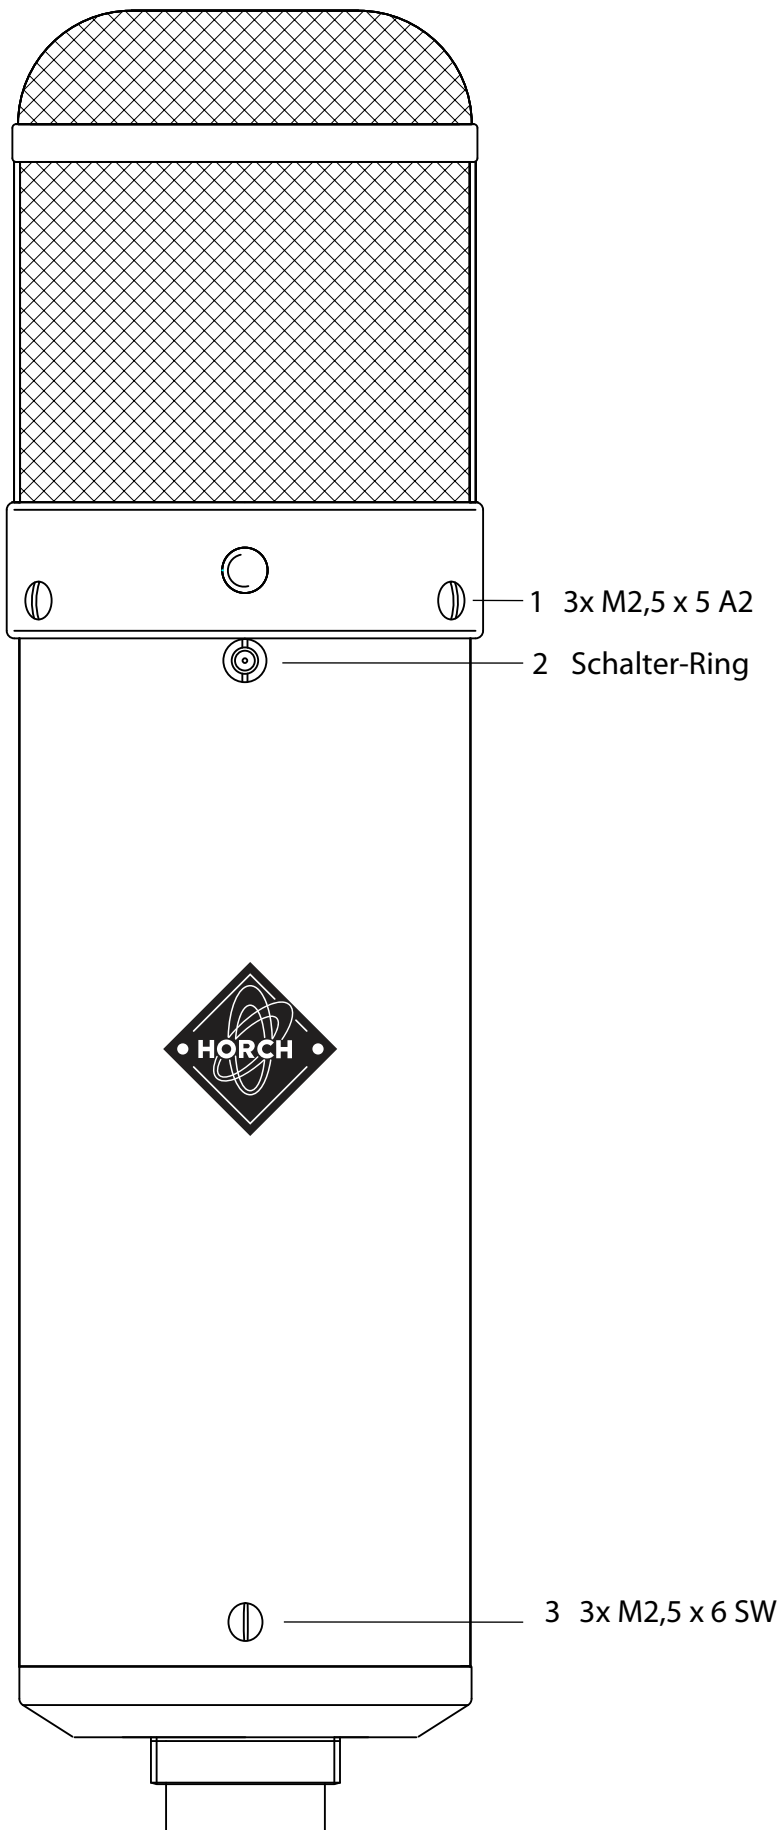

1. Take out screws 1 (3 piece )  
Take out screws 3 (3 piece )
2. Take out Schalter-Ring 2  
-The blade of the screwdriver must fit exactly!
3. Take off the microphone head
4. Remove the capsule together with its plate -Take the screwdriver as a lever on front of the tube at the cutout. Caution!! Never touch the diaphragm with your fingers!!!  
Touch the capsule holder at the bottom.
5. Press the switch inside.  
slowly move the tube up while watching the switch.

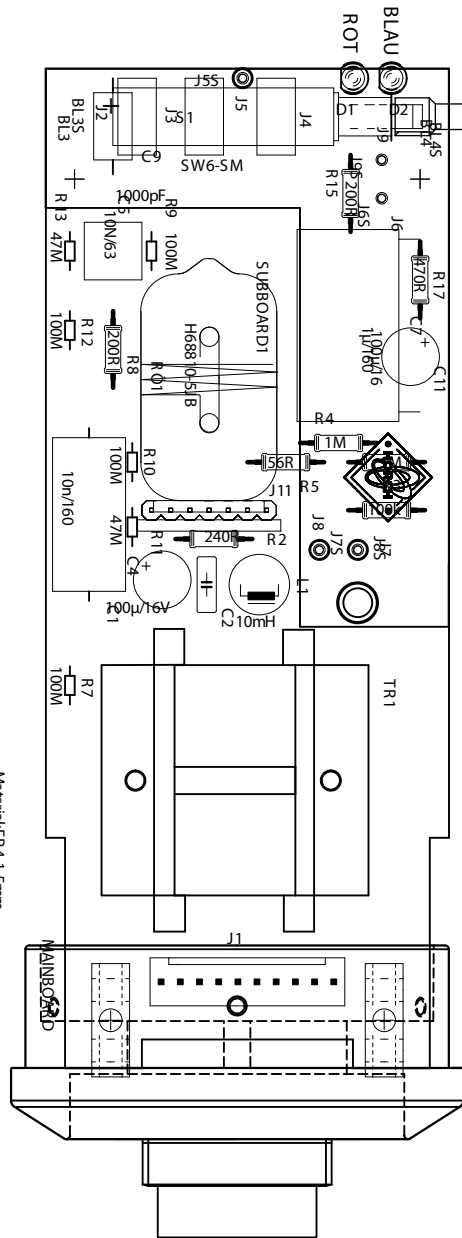

Material:FR4 1,5mm

